

Most likely Cause: Machine is too cold.

**How to resolve:** Place small fan heater inside the machine for a few minutes to bring the temperature above 4°c.

**How to avoid issue:** In very cold conditions, warm the machine prior to turning on.

A temperature alert function can also be activated in the settings menu.

When this is activated, if the temperature is below 6°c, a thermometer symbol will display at the top of the screen to alert the operator. The machine can still be used.

If the temperature falls below 4°c, the screen will display the image below. The machine cannot be used until the temperature is raised.

