


Spindle Break resistor

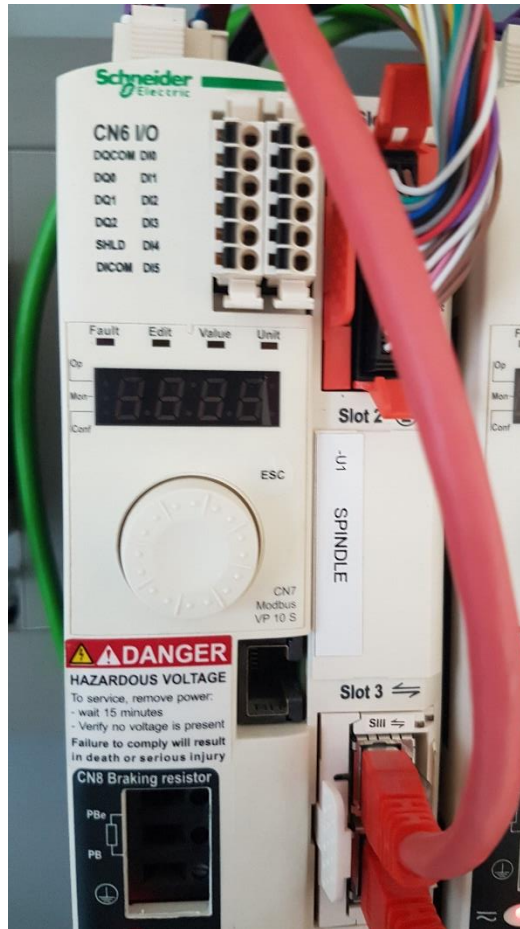


- 1) Switch off fuses F1 and F4




- 2) Remove Cover at CN8



- 3) Wait till LED is Off (Danger High voltage on terminals)

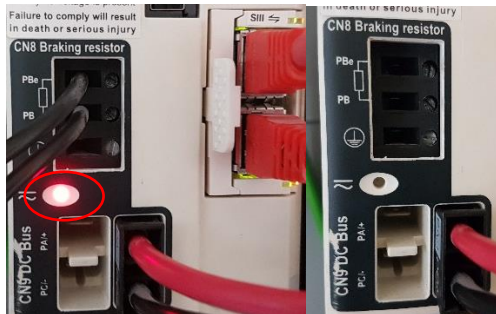

- 4) Mount Break resistor

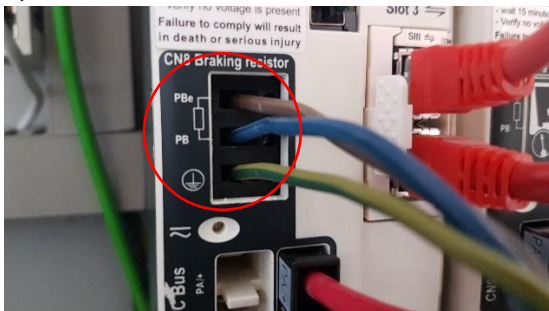

- 5) Swicth on power again.