





Packing instruction WR-DCM3

Remove the door handle	Unplug the power supply
	
Remove the screws holding the side windows	Be careful not to drop the windows! Wrap the windows in a protective foil.
	

Remove the top and bottom screws from the bracket which hold the HMI screen and carefully place the screen on the roof of the machine (screen facing up!)



<p>Remove the 2 screws holding the bracket and mount it again inside the machine using the same bolts</p>	<p>Mount the HMI screen inside the bracket and secure the HMI screen to the front door to make sure it doesn't get damaged during transport!</p>
	

Raise the machine with a pallet lifter and screw down the feet until their highest level possible. Lower down the pallet lifter until the machine stands on its feet.

Place a pallet under the machine and lift it with a pallet lifter



Remove the 4 feet from the machine and place them in the box inside the machine



Place the power cable inside the machine together with all accessories



Tape the plexiglass side panels to the back of the machine



Pack the machine in the carton box



Cover the top of the machine and secure it by tape or straps



Secure the machine to the pallet using a lashing strap