

1. This is an instruction on how to change the Black protection strip on the WM800


1. The first step is to go to Settings, located in the top left corner.




2. Then press manual mode



3. Then you set the selector to joystick (look at the picture)

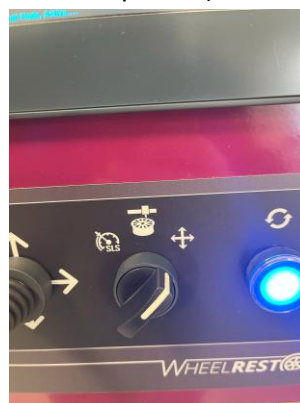

4. Then you activate X & Z by pressing both on the screen

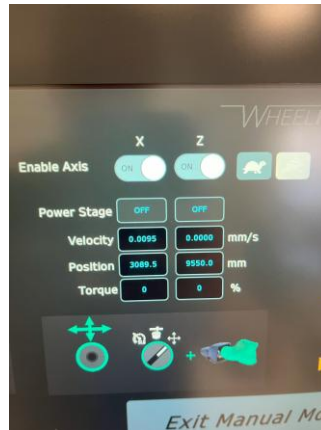

5. Then you move the red bar down so it's roughly in the middle as you can see on the picture.



6. Then you need to use an Allen key, size 3 to remove the upper rubber part. You do the same for the lower bottom part.



7. Then you need to use an Allen key, size 2 to remove the lower upper rubber. You do the same for the lower upper rubber.



8. After that on both sides, you can remove the next piece, which has the black protection magnetic going through it. Remember which direction you must set it in.



9. Now remove the top and lower black protection magnetic piece, and remove the little aluminium, take the new black protection magnetic piece, and tape it together with the old one.



10. Then you can pull the old magnetic piece out of the top, while applying the new piece



11. After that, reattach the small piece of aluminum you removed earlier and secure it to the chassis. Once that is done, I will reattach the rubber at the top, so it's steady.



12. Then you have reattach next piece, please see the picture.



13. After doing it at the top, you will have to do it at the bottom as well. The black protection magnet, you need to cut the length so it fits.



14. After that you go to manual mode, move the red carriage, up and down, to check if you did it correctly.